TEST EQUIP. MAINT. - 7TH FL.
G34

OPERATING INSTRUCTIONS

TYPES 1214-A, -D, -E, AND -M UNIT OSCILLATORS

. . . . SINCE 1915
manufacturers of
electronic apparatus
for science and industry

GENERAL RADIO COMPANY
CAMBRIDGE 39, MASSACHUSETTS, USA

761-E
July, 1958

2.3 CONNECTORS. The output terminals of the Type 1214 Unit Oscillator are jack-top binding posts with 3/4-inch spacing. A link and separate ground binding post below the output pair permit grounded or ungrounded operation of the oscillator.

On the Type 1214-D, the EXT OSC panel jack permits use of the Type 1214-D's matching transformer with an external audio oscillator.

3 OPERATING PROCEDURE.

3.1 TYPES 1214-A AND 1214-E. Connect the device to be driven to the output binding posts. Connect the link between the lower two binding posts if grounded output is desired. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, set the OUTPUT FREQUENCY switch to the desired frequency, and snap the power switch ON. The panel lamp should light to indicate application of power.

By means of the output control in the center of the panel, output power may be varied from zero to a maximum of 200 mw into an 8000-ohm load for the Type 1214-A, 300 mw into an 800-ohm load for the Type 1214-E.

3.2 TYPE 1214-D. When the Type 1214-D Unit Oscillator is used with the Type 1611-B Capacitance Test Bridge, the Unit Oscillator output terminals should be connected to the EXT GEN terminals of the bridge. Connect the third binding post of the oscillator to an external ground, preferably at the same point at which the bridge is grounded. For grounded output, connect the link between the lower two binding posts. Set the SET TO BRIDGE MULTIPLIER switch to the position corresponding to the setting of the bridge MULTIPLY CAPACITANCE BY switch. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, and snap the power switch ON. The panel lamp should light to indicate application of power.

If an external audio oscillator is to be used with the Type 1214-D's matching transformer, connect the external oscillator to the EXT OSC jack, and connect the Type 1214-D output to the bridge EXT GEN connector. Set the bridge filter switch to EXT and connect an external filter to the bridge EXT FILTER jack.

Under normal operation, the output voltages delivered to the Type 1611-B bridge are as follows:

Multiplier	Capacitance	Volts	Multiplier	Capacitance	Volts
X 1	1	37	X 100	100	4.8
	10	31		1000	4.8
X 10	10	16	X 1000	1000	1.6
	100	15		10,000	1.6

3.3 TYPE 1214-M. Connect the device to be driven to the output of the Type 1214-M, using either the side multipoint connector (see Figure 12 for proper connections) or the panel jack-top binding posts. For grounded output, connect the link between the lower two binding posts. Connect the Unit Oscillator to a 115-volt, 40-60-cps source, and snap the power switch ON. The panel lamp should light to indicate application of power.

By means of the output control in the center of the panel, output power can be varied from zero to 300 milliwatts into a 50-ohm load. To compensate for frequency shift with changing load conditions, or to match the output frequency to the frequency of an external filter or other tuned device, the Δf control will vary the output frequency $\pm 1\%$ from 1 Mc.

4 SERVICE AND MAINTENANCE.

4.1 GENERAL. The following information should enable the user to locate and correct ordinary troubles resulting from normal use. Major difficulties should be referred to our Service Department, which will cooperate as much as possible by furnishing instructions as well as by supplying any replacement parts needed. When writing our Service Department, please mention the serial and type numbers of the instrument. Also include a report of the trouble encountered, and any steps taken to eliminate the difficulty.

Before returning an instrument or part for repair, please write to our Service Department, requesting a Returned Material Tag, which includes shipping instructions. Use of this tag will insure proper handling and identification. A purchase order covering repair of material returned should also be forwarded to avoid unnecessary delay.

4.2 REMOVAL OF COVER. To remove the cover, loosen the thumbscrew on the right-hand side of the instrument and slide the cover off, away from the panel. With the cover off, tubes and fuses are accessible.

4.3 TEST VOLTAGES AND RESISTANCES. The following test voltages and resistances are given to aid in trouble-shooting. Due to the direct connection to the power line, the oscillator and power-supply circuits are not grounded to the chassis. Voltage measurements are therefore referred to pin 2 of the Type 117N7GT tube. D-C voltages were measured with a 20,000-ohm/volt meter. Resistance measurements were made with pin 8 connected to pin 2, and with power off.

TABLE OF VOLTAGES

V1, PIN	VOLTS TO PIN 2			
	1214-A	1214-D	1214-E	1214-M
1	0	0	0	0
2	0	0	0	0
3	112	94	120	112
4	-10	-45	-13	-43
5	92	96	94	112
6	0	0	0	0
7	115 ac	115 ac	115 ac	115 v ac
8	123	109	120	116

TABLE OF RESISTANCES

V1, PIN	RESISTANCE TO GROUND (in ohms)			
	1214-A	1214-D	1214-E	1214-M
1	∞	∞	∞	∞
2	0	0	0	0
3	330	350	320	300
4	1 M	1 M	1 M	300 k
5	4.7 k	295	8.5 k	300
6	0	0	0	0
7	180	180	180	180
8	0	0	0	0

NOTE: For conditions of measurement, refer to paragraph 4.3.

PARTS LIST

			PART NO. (NOTE A)	MODEL(S)
RESISTORS (NOTE B)	R1	THYRITE	REU-8	A, D, E
	R1	250 ±10%	POSC-12	M
	R2	510 k ±5% 1/2 w	REC-20BF	A, D, E
	R2	300 k ±5% 1/2 w	REC-20BF	M
	R3	75 ±10% 1/2 w	REW-3C	M
	R4	4.3 k ±5% 1/2 w	REC-20BF	A
	R4	8.2 k ±5% 1/2 w	REC-20BF	E
	R4	100 ±5% 1/2 w	REC-20BF	M
	R5	1 M ±10% 1/2 w	REC-20BF	A, D, E
	R5	100 k ±10% 1/2 w	REC-20BF	M
	R6	10 k ±5%	214-C	A
	R6	2.5 k ±10%	POSC-7	E
	R6	100 ±5% 1/2 w	REC-20BF	M
	R7	75 ±10% 1/2 w	REW-3C	A, D, E
	R8	100 k ±10% 1/2 w	REC-20BF	A, D, E
	R9	100 ±5% 1/2 w	REC-20BF	A, D, E
	R10	470 ±10% 1/2 w	REC-20BF	A, D, E
	R11	100 ±5% 1/2 w	REC-20BF	A, D, E
CAPACITORS (NOTE C)	C1	0.5 ±10% 600 dcwv	COL-72	D
	C1A	0.27 or 0.33 ±5% 400 dcwv (NOTE D)	1214-E-40	A, E
	C1A	30 300 dcwv	Part of COE-52	M
	C1A	0.068 ±10% 400 dcwv	1214-E-40	D
	C1B	(NOTE E) 400 dcwv	1214-E-40 or COL-71	A, D, E
	C1B	30 300 dcwv	Part of COE-52	M
	C1C	90 300 dcwv	Part of COE-52	M
	C2	0.01 ±10% 300 dcwv	COM-35B	A, E
	C2	0.047 ±10% 400 dcwv	COW-25	D
	C2	35 µµf ±10% 500 dcwv	COM-20B	M
	C3	30 300 dcwv	Part of COE-52	A, E
	C3	130 µµf ±10% 500 dcwv	COM-20B	M
	C3A C3B C3C	30 30 90 } 300 dcwv	COE-52	D
	C4	30 300 dcwv	Part of COE-52	A, E
	C4	4-50 µµf	COA-2	M
	C5	90 300 dcwv	Part of COE-52	A, E
	C6	0.001 1000 dcwv	COC-61	M
	C7	0.001 1000 dcwv	COC-61	M
	C8	0.001 1000 dcwv	COC-61	M
	C9	0.001 1000 dcwv	COC-61	M

		PART NO. (NOTE A)	MODEL(S)
F1	0.4 amp Slo-Blo Type 3AG	FUF-1	A, D, E
F1	0.5 amp Slo-Blo Type 3AG	FUF-1	M
F2	0.4 amp Slo-Blo Type 3AG	FUF-1	A, D, E
F2	0.5 amp Slo-Blo Type 3AG	FUF-1	M
L1 L2	INDUCTOR INDUCTOR }	1330-203-2	M
L3	CHOKE, 2.2 mh, Waters Type C1059	CHA-55	M
L4	CHOKE, 2.2 mh, Waters Type C1059	CHA-55	M
P1	PILOT LAMP, 115 v	NE-51	All
S1	SWITCH, dpst	SWT-333	All
S2	SWITCH, dpdt	SWT-335	A, E
S2	SWITCH, Rotary	SWRW-178	D
T1	TRANSFORMER	345-455-2	A
T1	TRANSFORMER	345-467	D
T1	TRANSFORMER	345-473	E
T2	TRANSFORMER	746-428	D
V1	TUBE	117N7-GT	All

NOTES

(A) Type designations for resistors and capacitors are as follows:

COA - Capacitor, air
COC - Capacitor, ceramic
COE - Capacitor, electrolytic
COL - Capacitor, oil
COM - Capacitor, mica
POSC - Potentiometer, composition
REC - Resistor, composition
REU - Resistor, unclassified
REW - Resistor, wire-wound

(B) All resistances are in ohms except as otherwise indicated by k (kilohms) or M (megohms).

(C) All capacitances are in microfarads, except as otherwise indicated by µµf (micromicrofarads).

(D) Value determined at General Radio laboratory.

(E) Value and type determined at General Radio laboratory.

When ordering replacement components, be sure to include complete description as well as Part Number. (Example: R85, 51 k ±10%, 1/2 w, REC-20BF.)

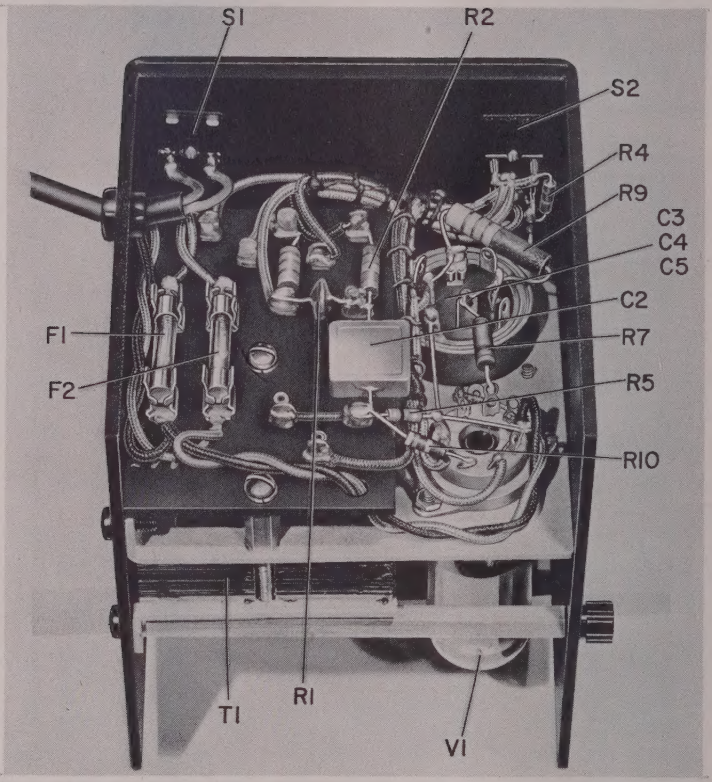

Figure 2. Interior View, Type 1214-A Unit Oscillator.

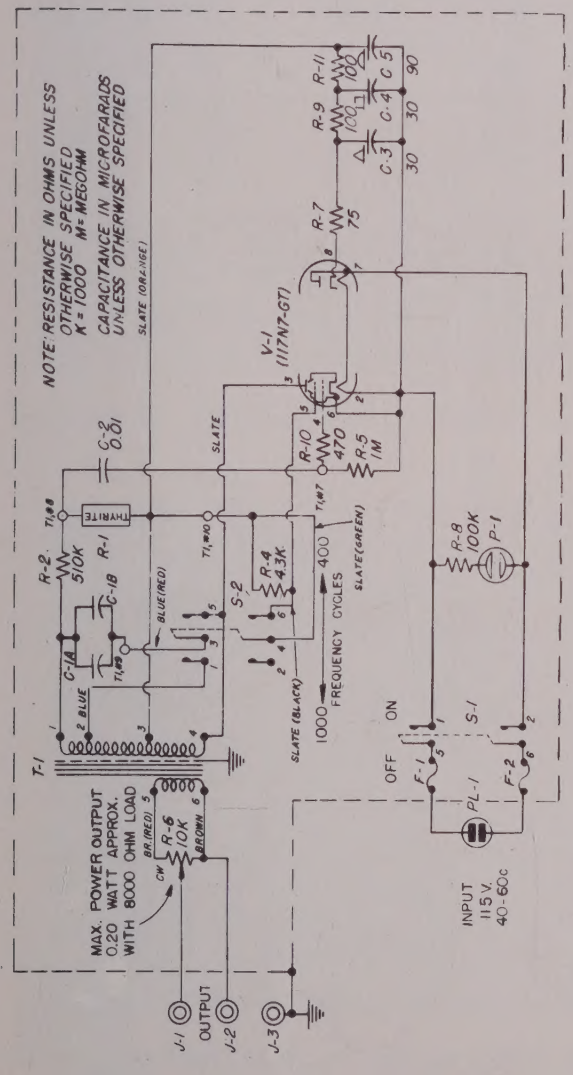

Figure 3. Schematic Diagram, Type 1214-A Unit Oscillator.

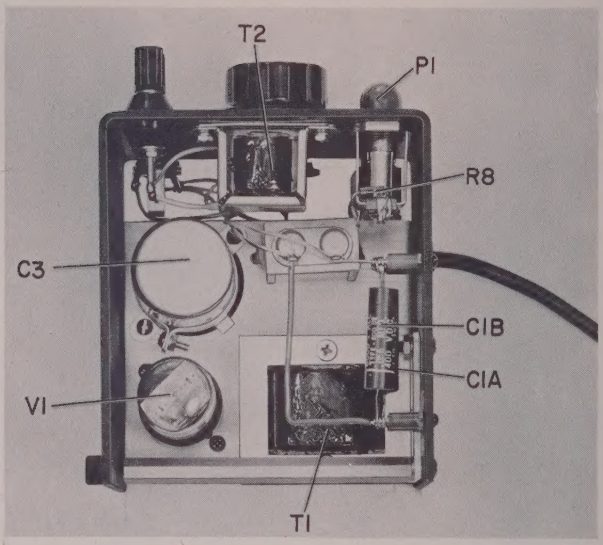

Figure 4. Top Interior View, Type 1214-D Unit Oscillator.

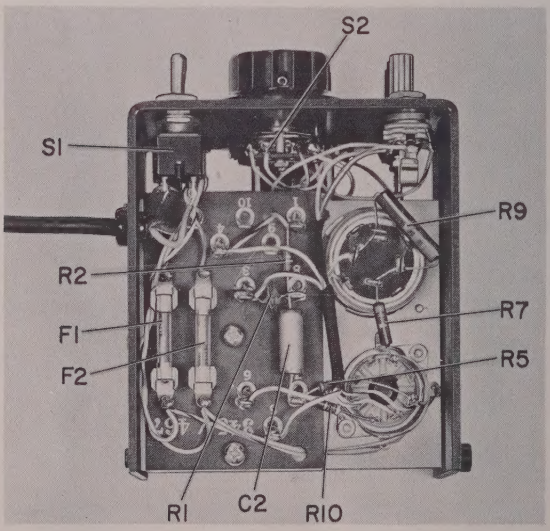

Figure 5. Bottom Interior View, Type 1214-D Unit Oscillator.

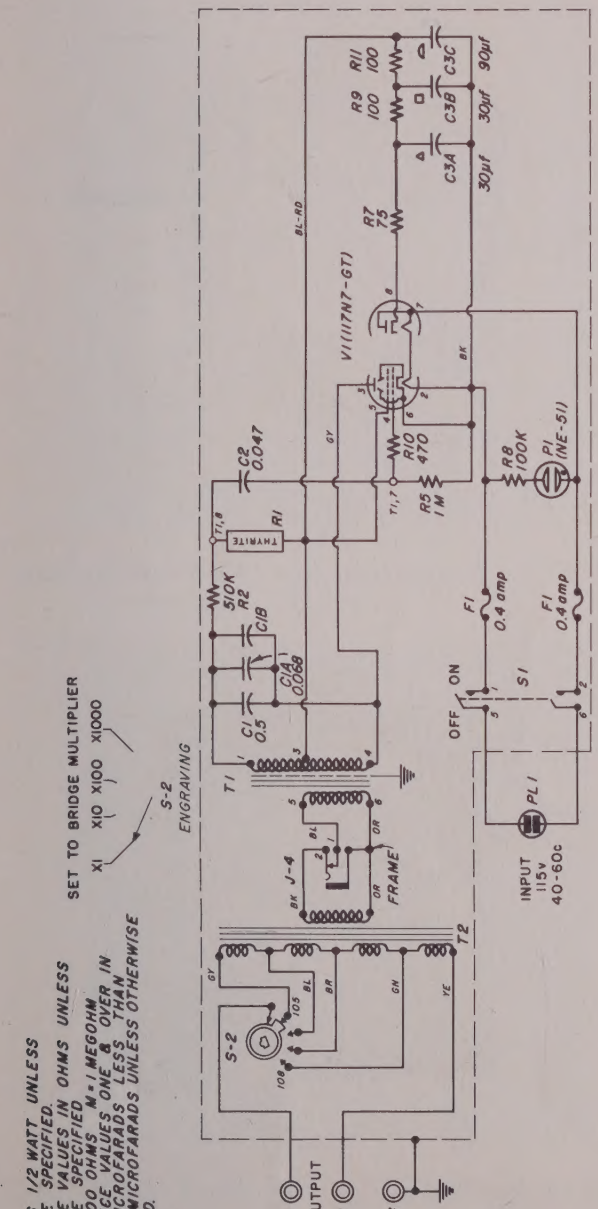

Figure 6. Schematic Diagram, Type 1214-D Unit Oscillator.

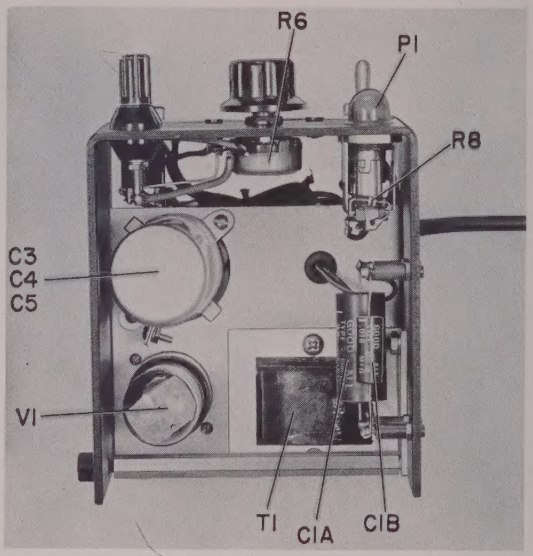

Figure 7. Top Interior View, Type 1214-E Unit Oscillator.

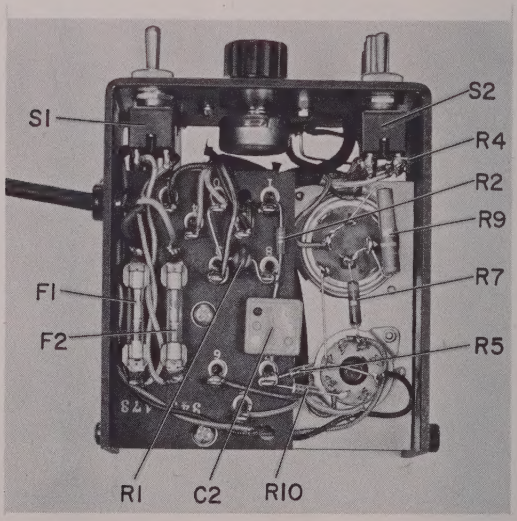

Figure 8. Bottom Interior View, Type 1214-E Unit Oscillator.

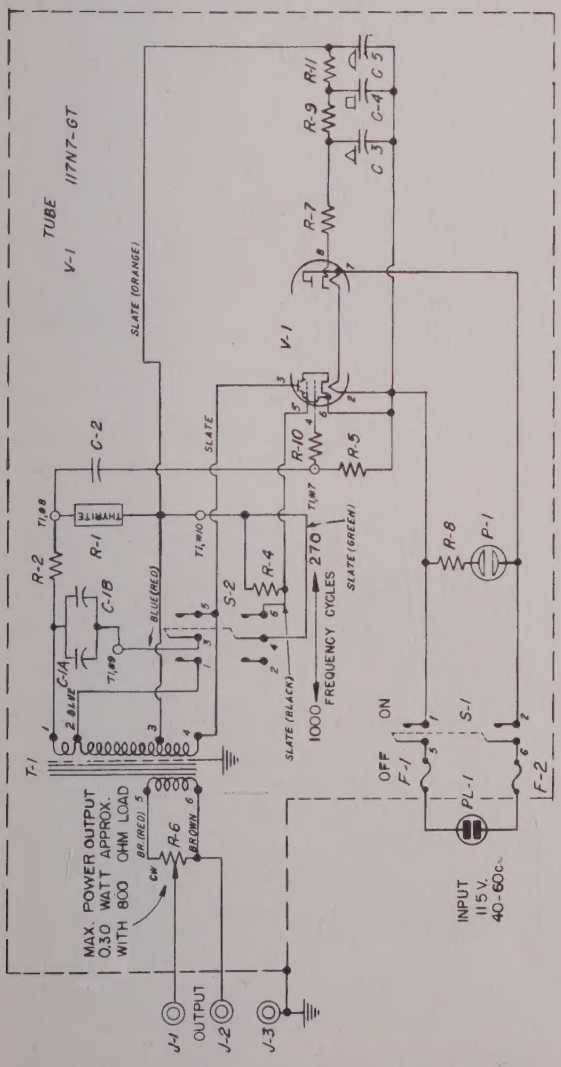

Figure 9. Schematic Diagram, Type 1214-E Unit Oscillator.

GENERAL RADIO COMPANY

275 MASSACHUSETTS AVENUE, CAMBRIDGE 39, MASS.

TRowbridge 6-4400

DISTRICT OFFICES

NEW YORK

Broad Ave. at Linden, Ridgefield, N. J.

Telephone N.Y. WOrth 4-2722
N.J. WHitney 3-3140

PHILADELPHIA

1150 York Rd., Abington, Penna.

Telephone HAncock 4-7419

WASHINGTON

8055 13th St., Silver Spring, Md.

Telephone JUniper 5-1088

CHICAGO

6605 West North Ave., Oak Park, Ill.

Telephone VIllage 8-9400

LOS ANGELES

1000 N. Seward St., Los Angeles 38, Calif.

Telephone HOllywood 9-6201

SAN FRANCISCO

1182 Los Altos Ave., Los Altos, Calif.

Telephone WHitecliff 8-8233

CANADA

99 Floral Pkwy., Toron

Telephone CHerry 6-2

REPAIR SERVICES

EAST COAST

General Radio Company

Service Department

22 Baker Ave., W. Concord, Mass.

Telephone EMerson 9-4400

MIDWEST

General Radio Company

Service Department

6605 West North Ave., Oak Park, Ill.

Telephone VIllage 8-9400

WEST COAST

Western Instrument Co.

826 N. Victory Blvd., Burbank, Calif.

Telephone VIctoria 9-3013

CANADA

Bayly Engineering, Ltd.

First Street, Ajax, Ontario

Telephone Toronto EMpire 8-6866

www.manualsplus.com

1022723

Printed in USA